



WINDOW CHANNEL FIT INSTRUCTIONS

2 AND 4 DOOR SEDAN, SEDAN DELVRY., STN. WGN.

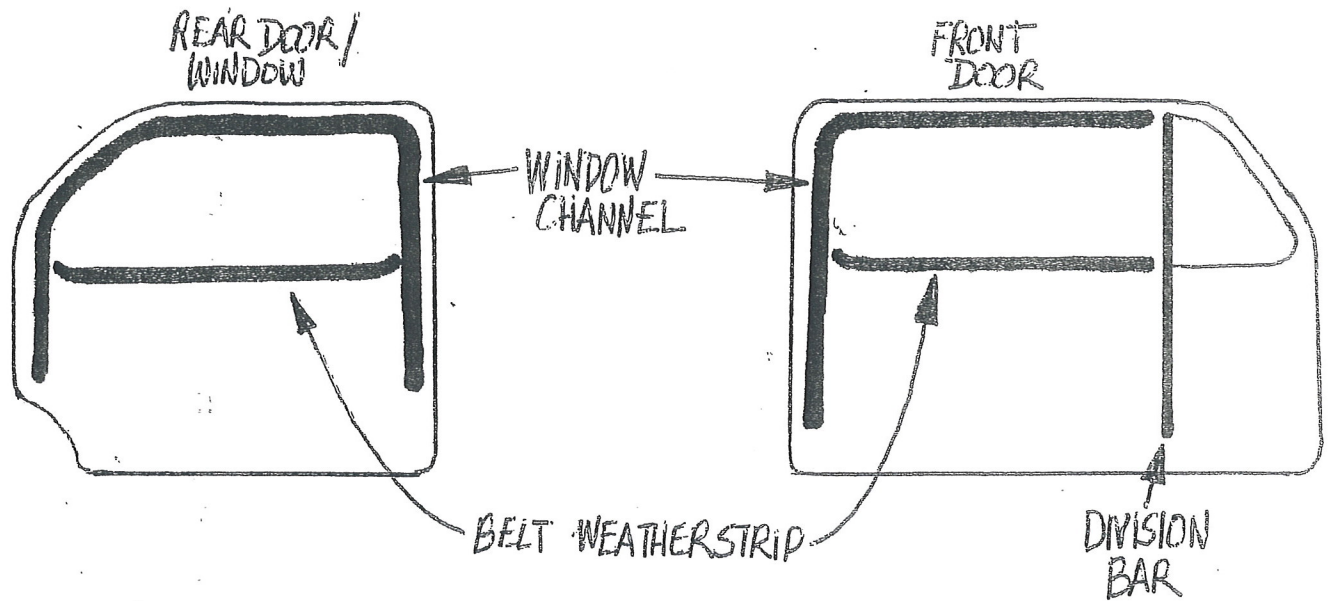


① PREFORM WINDOW CHANNEL TO FIT SHAPE OF WINDOW. WHEN BENDING TIGHT CORNERS, BEND SLOWLY AND GENTLY SLIDE CHANNEL STAINLESS AND FABRIC AWAY FROM BEND TO PREVENT KINKING.

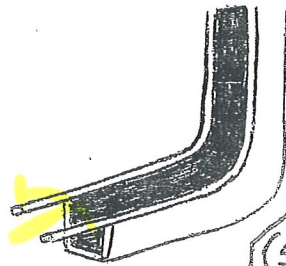

TYPICAL BEND, TRIM EXCESS TO CORRECT LENGTH AFTER FORMING. (STAINLESS BEADS NEED TO SLIDE ON CHANNEL TO PREVENT KINKING.)

② USE A SILICONE RUBBER AND CAULKING GUN TO ADHERE WINDOW CHANNEL TO CAR. MASKING TAPE WILL HOLD CHANNEL IN PLACE UNTIL SILICONE CURES (RECOMMEND 24 HRS.) ORIGINAL CHANNEL CLIPS NOT AVAILABLE.

③ ORIGINAL BELT WEATHERSTRIP IS STAPLED IN PLACE. REMOVE STAPLES. FORM AND CUT TO LENGTH BELTWEATHERSTRIPS, LEAVING A LITTLE EXTRA STAINLESS TO FLATTEN. INSTALL FLATTENED STAINLESS BETWEEN CHANNEL AND DOOR TO HELP HOLD IT IN PLACE IN CORNERS.

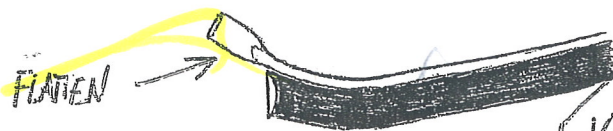

HOLD BELT WEATHERSTRIP IN PLACE WITH WEATHERSTRIP ADHESIVE. USE 1/8" ALUMINUM POP RIVETS 5 TO 6 INCHES APART TO COMPLETE INSTALLATION.

④ INSTALL DIVISION BAR WITH 1/8" POP RIVETS TO HOLD VENT WINDOW ASSEMBLY TOGETHER. ~~CUT DIVISION BAR WILL DO BOTH FRONT DOORS. CUT IN HALF AND TRIM TO FIT.~~